

SOUTH HILL BASEBALL PITCH COUNT SCOREBOARD


Pitch Count :

- Turn main scoreboard for that field on first... top left toggle switch
- Fields are labeled for controller and returned next to scoreboard
- Turn on RC100 controller for pitch count – hold bottom left key on/off
- New Game (screen may say previous game – say no or do below)

Display	Action
PRESS ENT TO SELECT NEW GAME	<p>This key is typically implemented as an alternate function. Press <ALT> followed by <NEW GAME>.</p> <p>Press <ENTER> to start a new game.</p> <p>Note: All data for the current game in progress will be lost.</p> <p>Press <CLEAR> to cancel and resume normal operation.</p>

- Top buttons are used home -1 home and home +1 - guest -1 guest +1
 - When a pitcher is changed and you need to clear the number...

To manually change values, first press **<EDIT>** then HOME or GUEST **<SCORE +1>** or **<SCORE -1>** to display the current setting. Enter the correct number using the keypad and press **<ENTER>** to save.

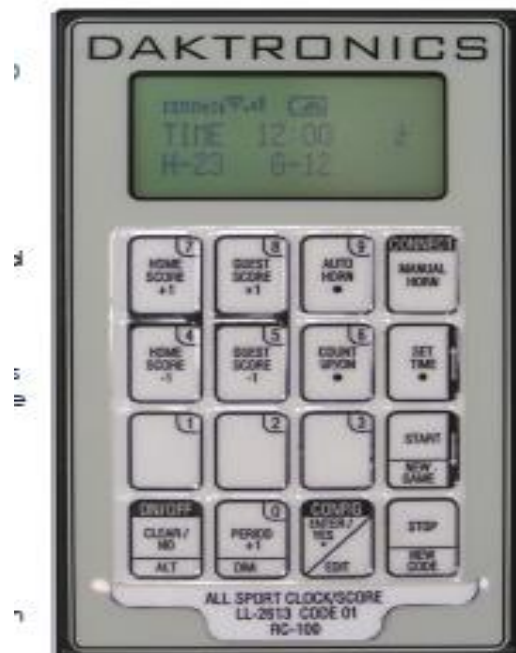

- Turn off – end of game
 - o Turn main scoreboard off... all lights will go off
 - o Hold On/Off on RC100 pitch count controller to turn off
 - o It will take 5 minutes for the pitch count lights to go off...
 - o After pitch count lights are off, plug power cord to RC100 so it will charge
 - o Do not plug up until pitch count lights are off or they will not turn off